

# SPACE SAVER

## Assembly instruction

Mounted in a drawer cabinet. Positioned on the left or right side.

### Included hardware



4 pcs  
M5 X 6  
Pre-mounted



6 pcs  
M5



6 pcs  
12 X 5.2



6 pcs  
M5 X 15



1. Install support legs beneath the SPACE SAVER, 300 mm from the side and 400 mm from the front.



2. Slide the top bar into position in the top shelf.



3. Secure the top bar to the top shelf using the included set screws.



4. Slide the top shelf with the installed bar into the holes in the main bracket.



5. Position the top assembly at the correct height for the water boiler. Secure with the set screws.




6. Place the SPACE SAVER against the cabinet side and bottom. Set the bracket at 90°, 300 mm from the side.




# SPACE SAVER

## Assembly instruction


Mounted in a drawer cabinet. Positioned on the left or right side.

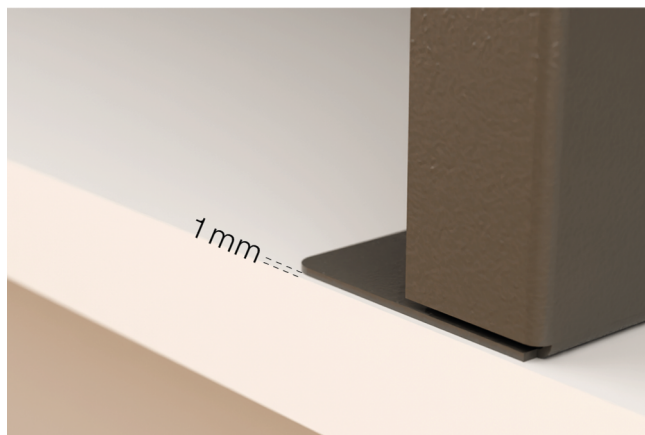


- 7.** Position the SPACE SAVER 1 mm from the front of the cabinet.

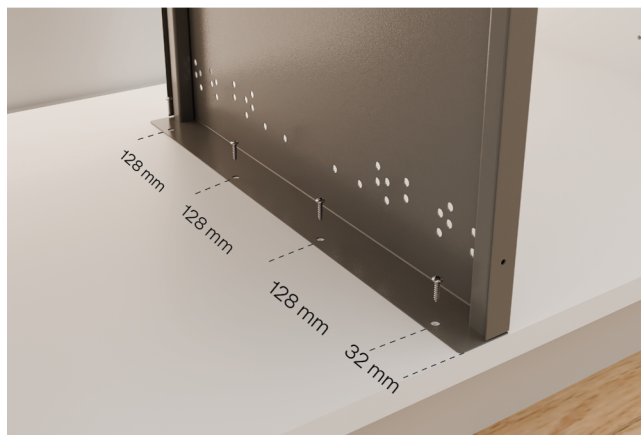

- 8.** Secure the SPACE SAVER main bracket using appropriate screws.

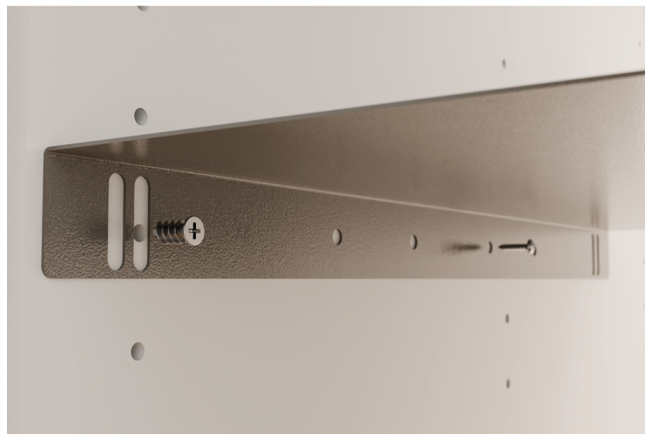

- 9.** Secure the top shelf to the cabinet side using appropriate screws.

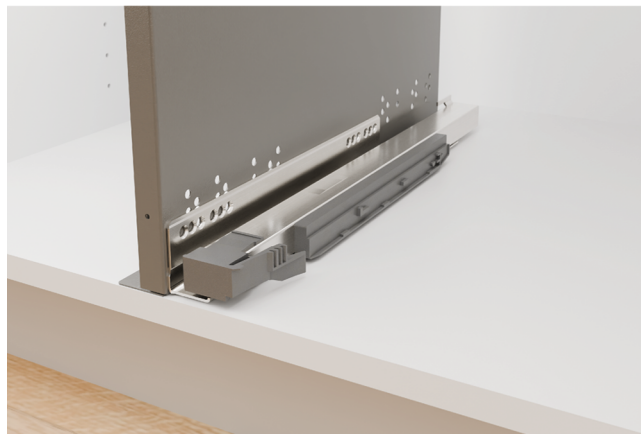

- 10.** Install the drawer slide according to the manufacturer's instructions.



- 11.** Secure the drawer slide to the SPACE SAVER using the included bolts, washers and nuts.



- 12.** Slide the cover plate onto the holding pins.