

CUBE SMART

Assembly instruction


Mounted on drawer sides.



1.



2. Place the frame on the drawer sides.

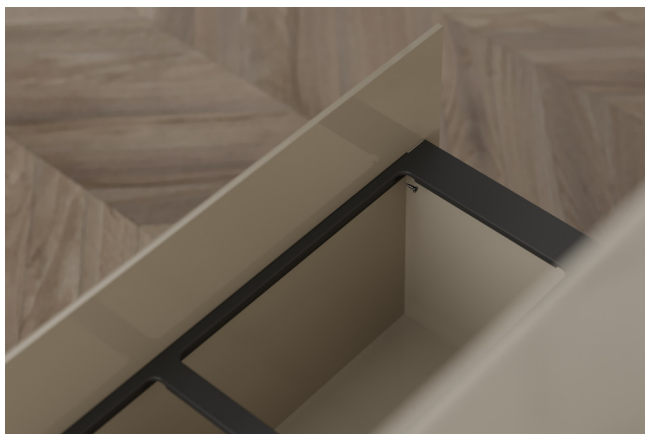

3. Attach the frame on the front of the drawer using 2 screws. 1 screw on each side.



4. Insert bins, lid and divider.